
WIDE-DOC-WALR24-01 / EN / R2 - EDITORIAL REVIEW

WALR24 / WALR24-A

Connection scheme

Legacy diagram and terminal references, recovered from the original technical page. No applicability to other models is implied.

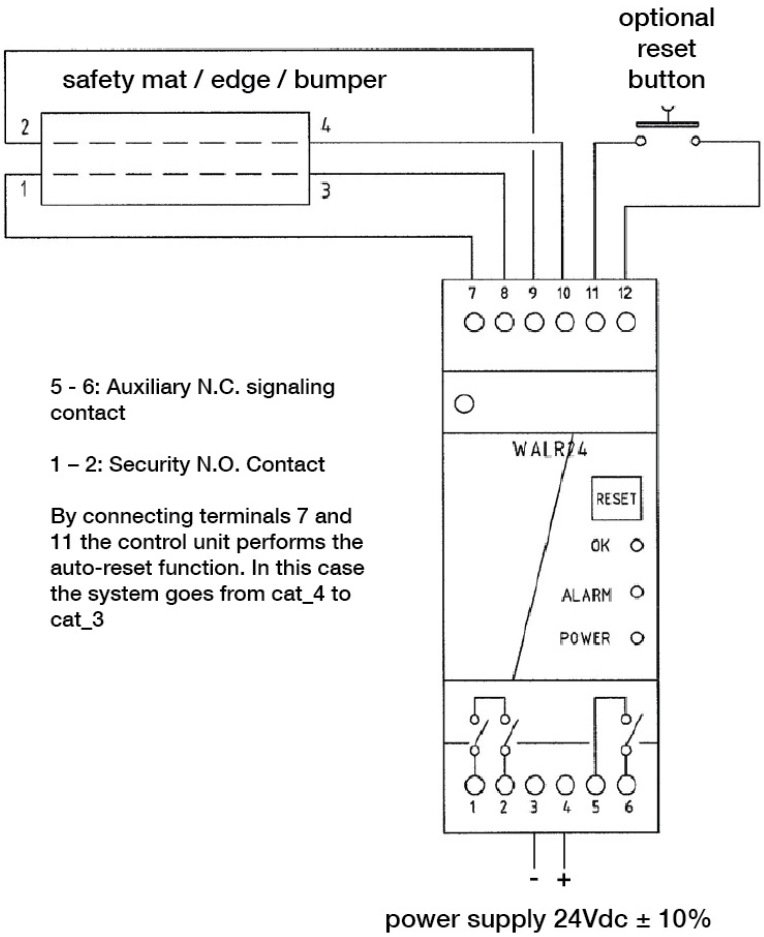

Original English annotations; see the legend and table on the next page. Source resolution is retained; electrical connections have not been redrawn.

> **USE NOTE**
>
> This editorial revision retains the source data. It does not replace applicable manuals or safety-function verification.

Terminal references

The original terminal table rebuilt as selectable text. The four sensitive-element terminals remain separate rows.

Function	WALR24 / WALR24-A
Safety mat / edge / bumper	**7**
Safety mat / edge / bumper	**8**
Safety mat / edge / bumper	**9**
Safety mat / edge / bumper	**10**
Power supply (+)	**4**
Power supply (-)	**3**
Safety output	**1**
Safety output	**2**
Auto reset	**Bridge between 7 - 11; 11 - 12 not connected**
Manual reset	**Button between 11 - 12**

DIAGRAM LEGEND

Safety mat / edge / bumper: pressure-sensitive device.
Optional reset button: as labelled in the original diagram.
5 - 6: auxiliary N.C. signalling contact; 1 - 2: safety N.O. contact.

Source note: connecting 7 and 11 enables auto reset; the source states that the system then changes from cat_4 to cat_3. This note is not a validation of the machine.

SOURCE WALR24 / WALR24-A connection scheme - WIDE